




Rates for your utilities provider must be programmed into your PowerCost Monitor™ display. Here's how you do it.

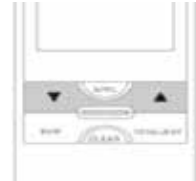

PROG/SYNC BUTTON:
Enter/Exit Program Mode,
Move between settings



UP/DOWN BUTTONS:
Change values of
each setting

1. Press and hold the PROG/SYNC button until you hear 1 beep. The hours on the clock will begin to flash.
2. Set the hour on the clock to the correct AM/PM hour using the UP/DOWN arrows then click the PROG/SYNC button once.
3. Set the minutes on the clock using the UP/DOWN arrows then click the PROG/SYNC button.
4. Set your preferred time format using the UP/DOWN arrows then click the PROG/SYNC button.
5. Set the day of the week using the UP/DOWN arrows then click the PROG/SYNC button.
6. Set your temperature preference using the UP/DOWN arrows then click the PROG/SYNC button.
7. Set your meter power factor using the UP/DOWN arrows then click the PROG/SYNC button. (1.0 for digital meters, 7.2 for disk type meters)
8. Choose TIER using the UP/DOWN arrows then click the PROG/SYNC button.
9. If you are on a single or flat rate plan follow step 10. If you are on a multi – tier rate plan move to step 11 then 12.
10. Set the electricity rate then press and hold the PROG/SYNC button until you hear 1 beep to exit program mode.
11. Set the electricity rate using the UP/DOWN arrows then click the PROG/SYNC button.
12. Set the threshold.
13. Repeat Steps 11 & 12 for each TIER then exit programming mode by pressing and holding the PROG/SYNC button until you hear 1 beep.

